

Installing Replay TX Check list

STEP 1

Install and setup TAPIT (from TAPIT EX CD)

Please follow instructions from the **Tapit EX Manual**. A hardcopy of this manual is included with your shipment. You can also find it on **TAPIT EX CD** in **docs** folder (Tapit Manual.pdf).

STEP 2

In case you've purchased Remote Manager, install and setup Remote Manager (from TAPIT EX CD)

Please follow instructions from the **Remote Manager Manual** located on your **TAPIT EX CD** in docs folder (Remote Manager Manual.pdf).

STEP 3

Make sure the power is OFF on the **Replay Box**. Attach **Replay Box(es)** to your network. Using **Replay**' MAC address (label is on the back), and your network DHCP, assign an IP address to the **Replay Box**. Turn On the power.

From another computer' Web browser, type the above IP address. You should see **Replay Home** page.

IMPORTANT:

All Replay Boxes clocks should be synchronized with PBX within the same Tapit location*. Each Replay Box clock has to be set at **exactly the same time** or **behind** (up to 5 seconds) the clock Tapit is using to date/time stamp call records (PBX). Replay box clock **cannot be faster** than the PBX clock.

*If you have purchased Remote Manager you most likely have more than one location (Main and remote sites), otherwise you have only one location (Main).

STEP 4

Install Tapit Web Reports for Replay TX (from Replay TX CD)

Make sure you are installing Tapit Web Reports from the Replay TX CD (NOT from the TAPIT EX CD).

Please follow instructions from the TapitWebTXReadMe.pdf file located on your **Replay TX CD** in **ReplayTX/docs** folder.

STEP 5

Install and configure Replay TX Server (from Replay TX CD)

Please follow instructions from the **ReplayTXServerManual.pdf** file located on your **Replay TX CD** in **ReplayTX/docs** folder.